


1

Step1: Firstly use **M4 * 16** self-tapping screws to lock the flat iron plate to the back of the cabinet.

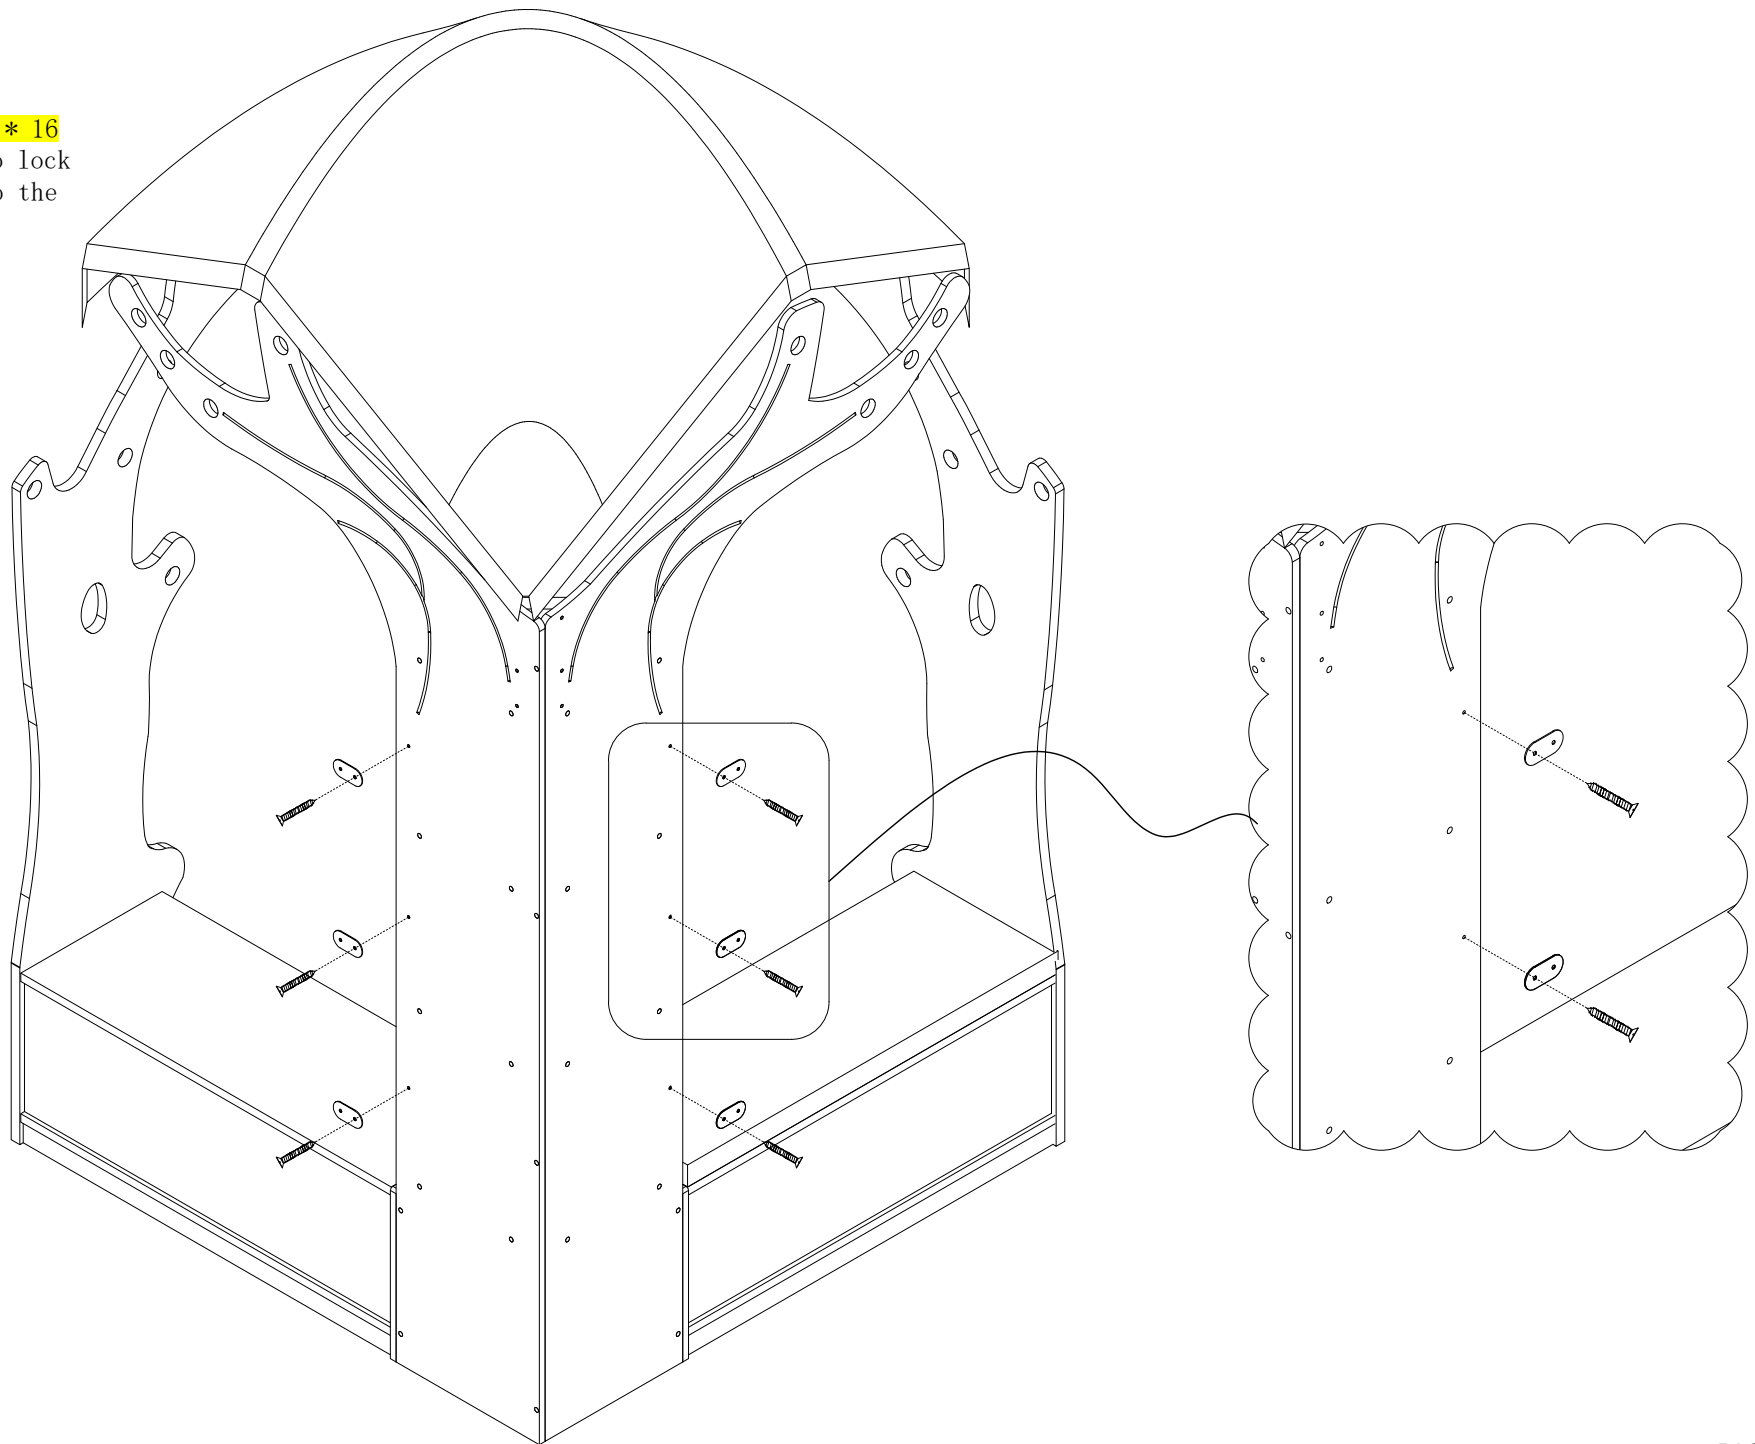

2

Step 2: Find a locating point in the corresponding position of the wall, drive the expansion tube into it, then push the cabinet to the corner of the wall, and use M5 * 40 self-tapping screws to pass through the flat iron plate and fix it with the expansion tube in the wall to finish the assembly.

